

Quantum QA

Air-to-water heat pump



Installation and user handbook

QCH EN 2437-1
TD18

CONTENTS

1 Important information.....	3
General.....	3
Safety.....	3
Symbols.....	3
Product labels.....	4
Product identification.....	4
Product registration.....	4
Environmental information.....	4
Glossary.....	4
2 Before installing.....	5
Transport.....	5
Installation area.....	5
Additional components.....	5
3 Components.....	6
Overview.....	6
Electrical box.....	6
4 Pipe installation.....	8
Pipe installation, general.....	8
Pipe connections.....	8
Preparations.....	8
Installation.....	9
5 Electrical installation.....	13
Electrical installation, general.....	13
Electrical connections.....	13
6 Commissioning.....	15
Before first start-up.....	15
First start-up.....	15
7 Service.....	16
General.....	16
Maintenance.....	16
8 Troubleshooting.....	17
Before troubleshooting.....	17
The heat pump does not start.....	17
No communication with hydronic unit.....	17
Insufficient hot water production.....	17
Low room temperature.....	17
High room temperature.....	17
Frost build-up on evaporator.....	18
Abnormal noise.....	18
9 Technical specifications.....	19
Sound levels.....	19
Dimensions.....	19
Operational data.....	19
Technical data.....	21
Energy labelling.....	22
Index.....	26

1 IMPORTANT INFORMATION

General

WARNING

Read this manual before starting the unit for the first time.

It is the owner of the product that is responsible for the system. If you suspect that the product is defective, contact your dealer.

Safety

Companies and service technicians who install or perform maintenance work on the product must be authorized and have the necessary certificates and licenses.

The work must follow applicable rules and regulations. Ensure that the work is carried out in a professional manner.

The manual must be available for people who install, support or use the heat pump.

CAUTION

This appliance can be used by children from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance must not be performed by children unless they are older than 8 and supervised.

R290 refrigerant

R290, a flammable refrigerant, is present in the product. In the event of a leak, leaking refrigerant might combine with air and create an environment that could catch fire.

WARNING

It is prohibited to expose the product to flammable gases or liquids as it may cause fire.

WARNING

The unit must not be placed close to flammable gas. Fire may start if there is a gas leak of any kind.

WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

Safe area

WARNING

The heat pump must be installed outdoors. The unit must be installed so that, in the event of a leak, refrigerant cannot enter the building.


Vertically, the safe area stretches from the top of the product to ground level (H1 in the following image).

From the top of the product, the safety zone extends 0.5 m from the product's outer edges.

At ground level, the safety zone extends one meter from the product's outer edges.

NOTE

The safe area is not to be mistaken for the allowed installation area.

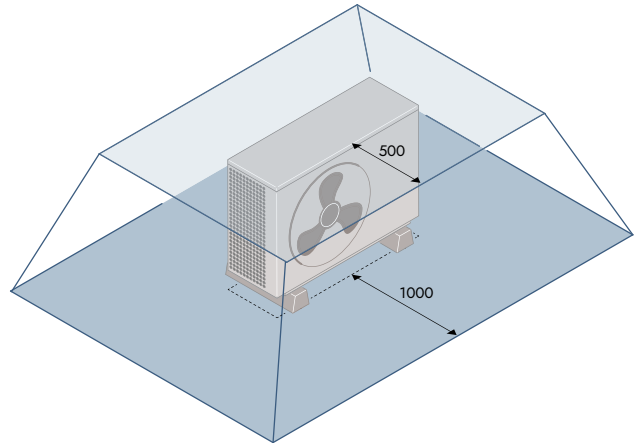

Windows, doors, ventilation openings, and potential ignition sources must not be present in the safe area. The safe area extends into neighboring structures. All wall penetrations in outer walls must be gas-tightly sealed.

Symbols

The manual contains the following symbols

WARNING

This symbol describes information that is of great danger to people or equipment.

CAUTION

This symbol describes information that could cause danger to people or equipment.

NOTE

This symbol describes information that is crucial when installing or servicing the heat pump.

TIP

This symbol describes information that can be helpful when installing or servicing the heat pump.

Product labels

These labels are found on the product.



CE marking indicates that a product has been assessed by the manufacturer and deemed to meet EU safety, health and environmental protection requirements.




Warning label that indicates that the product contains flammable material.



Warning label that indicates that open flames or other ignition sources are prohibited

Product identification

The product identification label is visible on the right-hand side of the product.

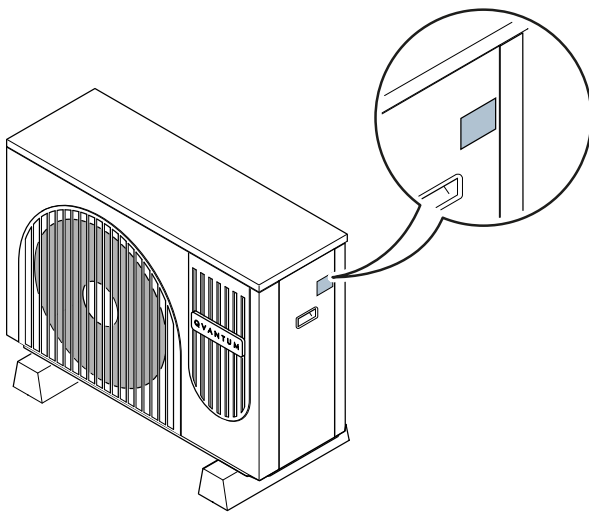

Product registration

The product must be registered for the warranty to take effect. The product can be registered no more than 12 months after the delivery date from the factory and no more than one month after the installation. If the product is registered at a later stage, the warranty period will be affected.

The product registration is done as part of the start-up guide in the Quantum app when setting up the Quantum hydronic unit.

Environmental information

Recycling



At the end of the electrical products useful life, it must not be disposed of with household waste.

Recycle at waste facility. Check with your local authority or retailer for local recycling regulations.

Packaging content

The product packaging contains the following materials.

MATERIAL		QA-9	QA-15
Cardboard	kg	6,5	9,2
Plastic	g	80	80
Wood (pallet)	kg	13,5	15,7
Metal	g	5	5

Glossary

The following terms are used throughout the manual to describe various functions of the product.

Distribution system

The distribution system is the system that is used to provide the house with heating through radiators, floor heating and/or fan convectors.

Hydronic unit

The hydronic unit consists of an accumulator tank, pipe connections, electrical connections and the graphical user interface. It provides the house with domestic hot water as well as heating through the distribution system.


Heat pump unit

The Quantum QA is a heat pump module that is placed outside of the facility. It draws heat from the outdoor air and transfers it to a hydronic unit.

2 BEFORE INSTALLING

Transport

Transport the unit in an upright position. Ensure that the unit is adequately secured so it does not fall down during transit.

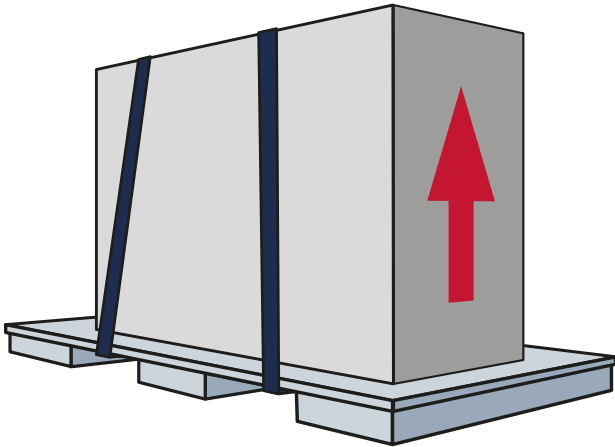

At arrival, ensure that the product was not damaged during transport.

If using a trolley or hand truck when moving the unit, always have the unit standing on the pallet.

Installation area

Measurements


When installing the unit, ensure that there is enough room for the inlet and outlet air. There must be at least 500 mm of free space behind and 1500 mm in front of the heat pump.

For servicing purposes, there must be at least 1000 mm of free space to the right and 500 mm to the left of the heat pump.




NOTE

Consider the height of obstacles surrounding the heat pump. High walls or other barriers can cause resonant sounds and unwanted recirculation of cold air.

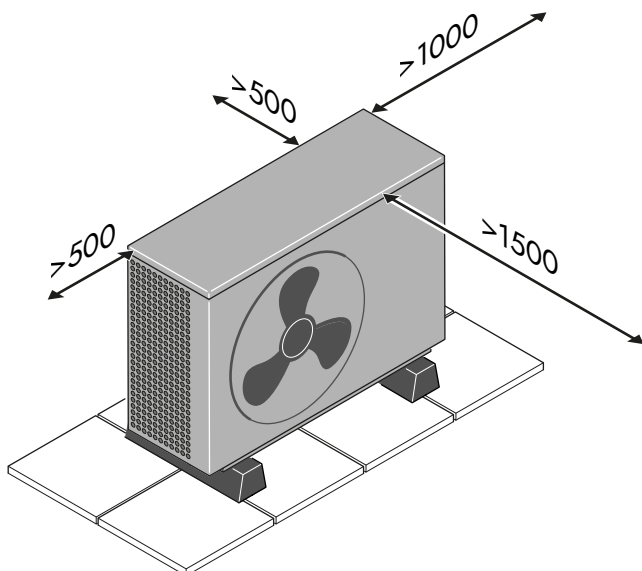

Prerequisites

Install the heat pump in accordance with the following requirements.

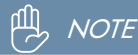

NOTE

If the heat pump is placed on concrete slabs, the slabs must rest on shingles or asphalt.

Place the heat pump on a solid surface that can withstand the weight of the heat pump.


- a) Do not place the heat pump directly on a lawn or a similar non-solid surface.
 - b) Place the heat pump on a concrete base, concrete slabs or equivalent.
- Ensure that the installation area is adequately ventilated.



NOTE

In case of leakage, the refrigerant must not enter the house through ventilation openings, doors or windows.

- Ensure that the installation area is free from heat radiation, fire hazards and ignition sources.
- Do not position the heat pump next to a noise sensitive wall.
- Ensure that the bottom of the evaporator is positioned higher up than the average level of snow depth.
- Ensure that condensing water is drained away from the heat pump.
- If there is a risk of snow falling onto the heat pump, protect the heat pump by installing adequate snow protection.

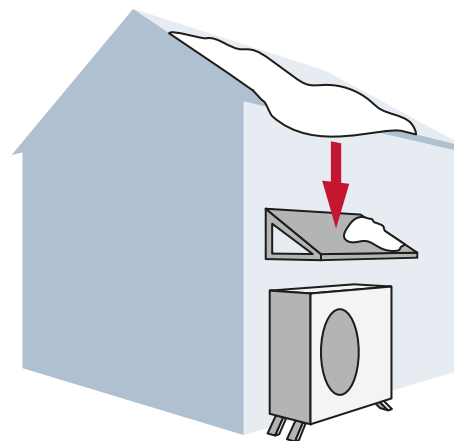

Additional components

Supplied components

The supplied components package contains the following items:


- Gas separator kit
- Two rubber mounts

3 COMPONENTS

Overview

The Quantum QA is an outdoor air heat pump unit that is installed with aQuantum QH hydronic unit.

The piping system is connected through connections that are on the back of the unit. The electrical system is connected to terminal blocks that are on the side of the unit.

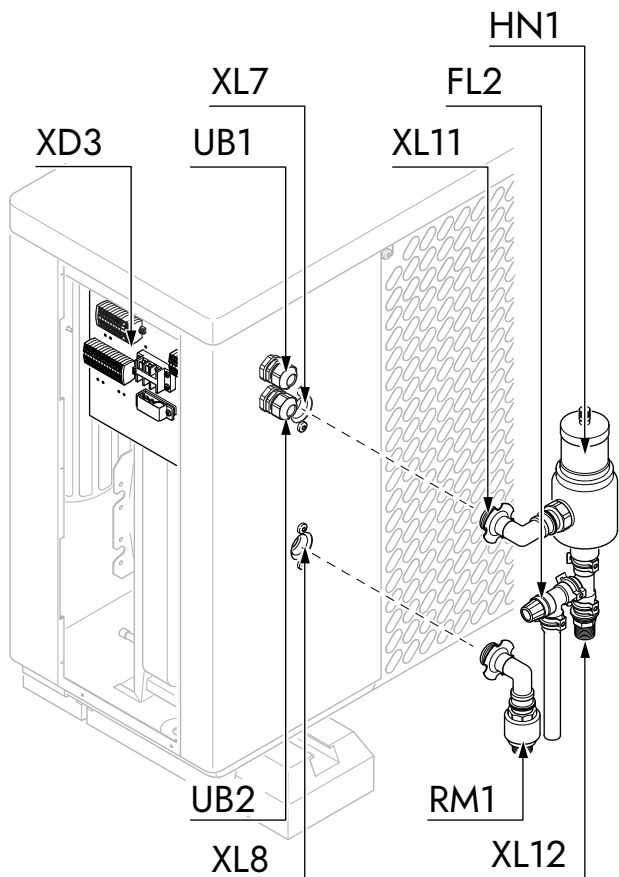

ID ¹	COMPONENT
FL2	Safety valve, distribution system
HN1	Gas separator
RM1	Check valve
UB1	Cable entry, power supply
UB2	Cable entry, communication
XD3	Junction box
XL7	Docking connection, outlet
XL8	Docking connection, inlet
XL11	Gas separator, inlet
XL12	Gas separator, outlet

¹ Component designations in accordance with IEC 81346.

Electrical box


ID ¹	COMPONENT
UB20	Cable retention, power supply
XD1	Terminal block, power supply

ID ¹	COMPONENT
-----------------	-----------


XD2 Terminal block, communication and sensors

¹ Component designations in accordance with IEC 81346.


QA-9

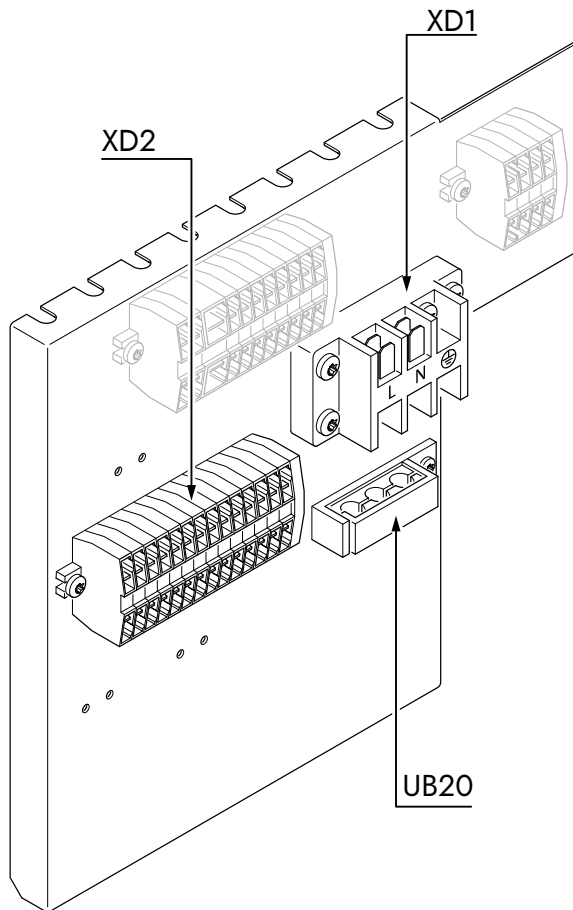

QA-15, 1-phase

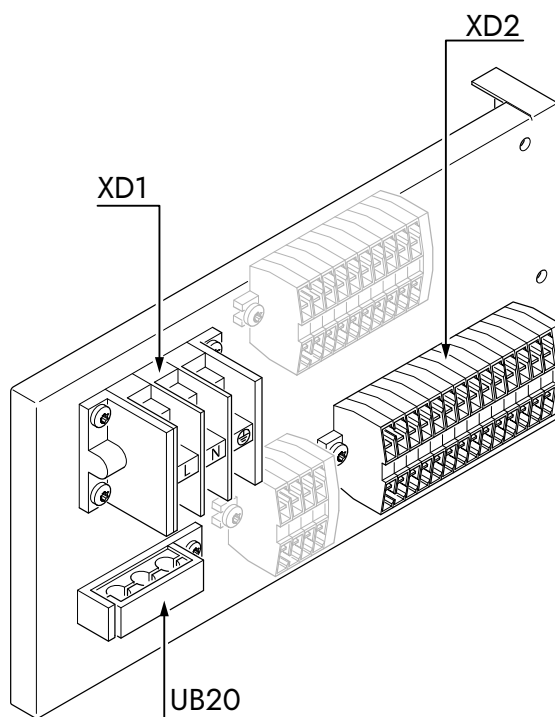

QA-15, 3-phase

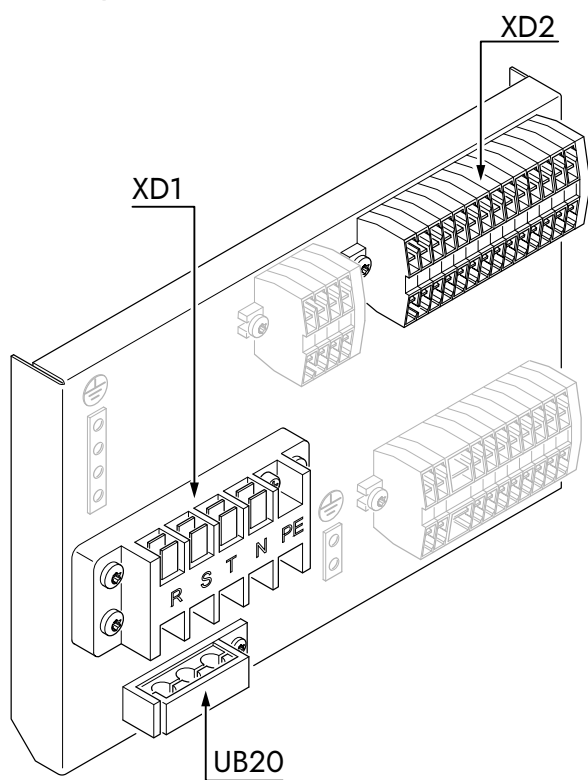

4 PIPE INSTALLATION

Pipe installation, general




NOTE

The pipe installations must be performed in accordance with applicable regulations.

Pipe connections

Measurements and dimensions

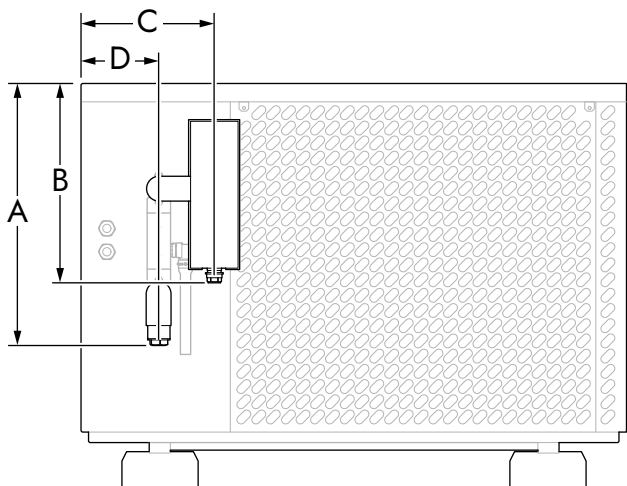


	QA-9	QA-15
A	575 mm	686 mm
B	445 mm	551 mm
C	283 mm	237 mm
D	165 mm	118 mm

Preparations


Vertical pipe routing

If the pipes are routed vertically, use the supplied extension for the gas separator housing to cover the pipes.

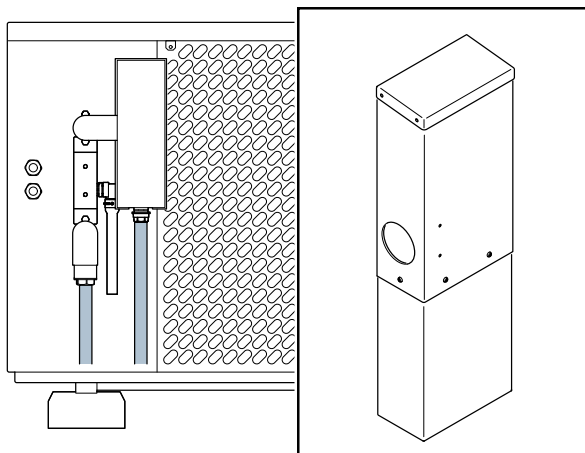


1. Place the extension inside the gas separator housing.

2. Fasten the extension with the supplied screws and washers.

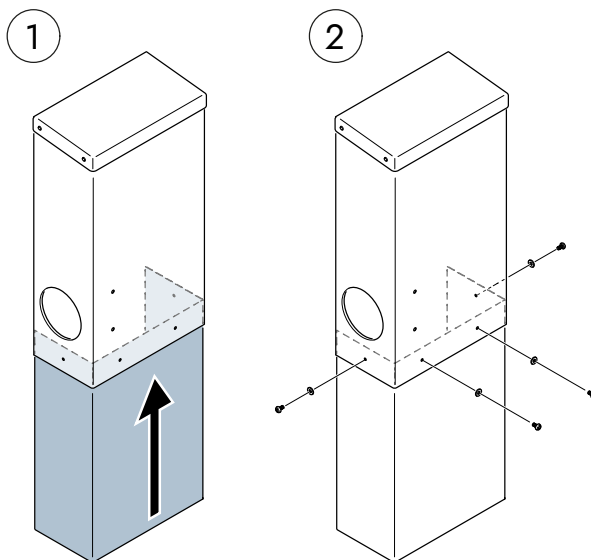

Horizontal pipe routing

If the pipes are routed horizontally, use the gas separator housing without the supplied extension to cover the pipes.

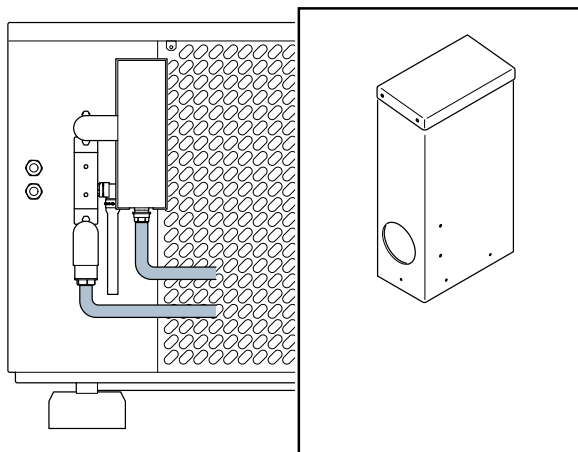

Installation

1. Install the supplied 90-degree couplings in the pipe connections at the back of the unit.




NOTE

Seal the threads of the couplings before installing them.



CAUTION

Do not remove the pre-fitted screws that are mounted above and below the pipe connections.


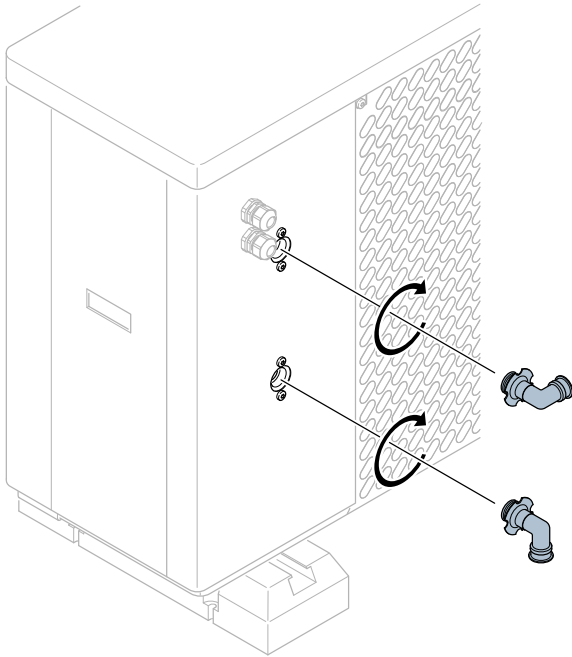


2. Ensure that the 90-degree couplings are mounted so that the coupling for the heating medium supply (XL7) points to the right and that the coupling for the heating medium return (XL8) points downwards.




NOTE

Ensure that the distance between the back of the product and the top of the flanges of the couplings is 6 - 7.5 mm.

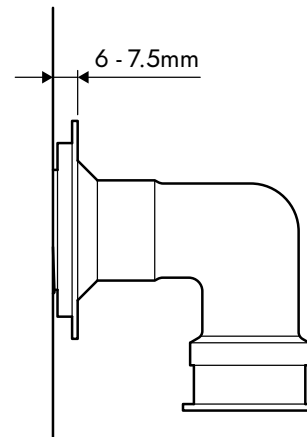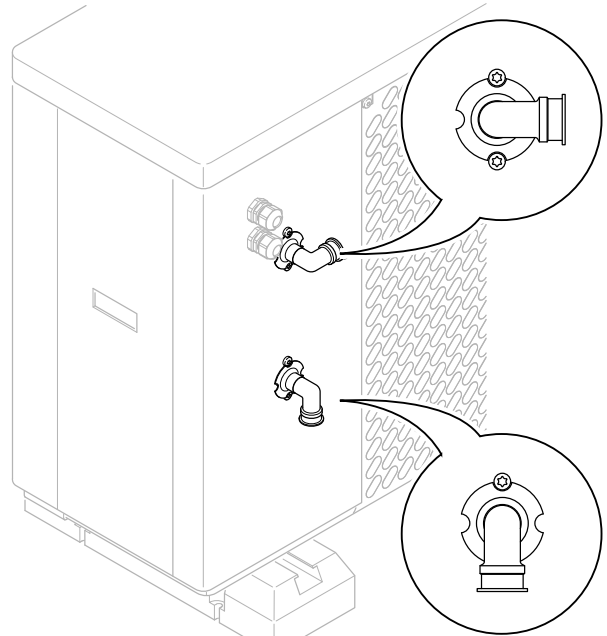


3. Remove the pre-fitted screws from the unit.

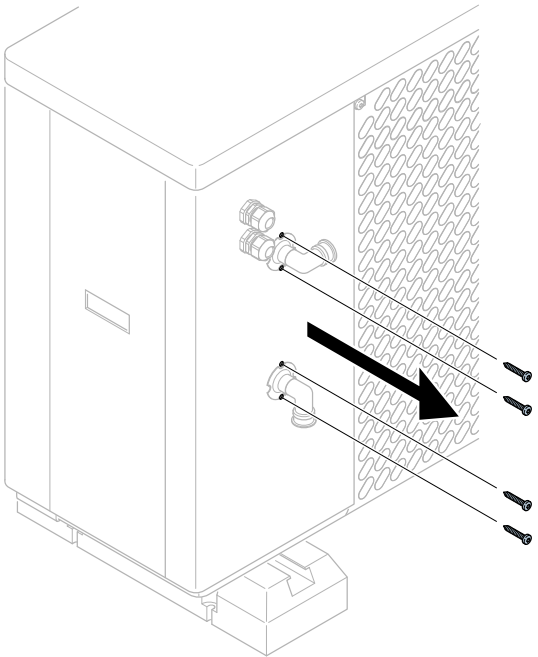


4. Fasten the 90-degree couplings and the supplied bracket with the supplied hexagonal screws.

! CAUTION
Fasten the top and bottom screws before fastening the bracket.


NOTE
Place the bracket on top of the coupling flanges.

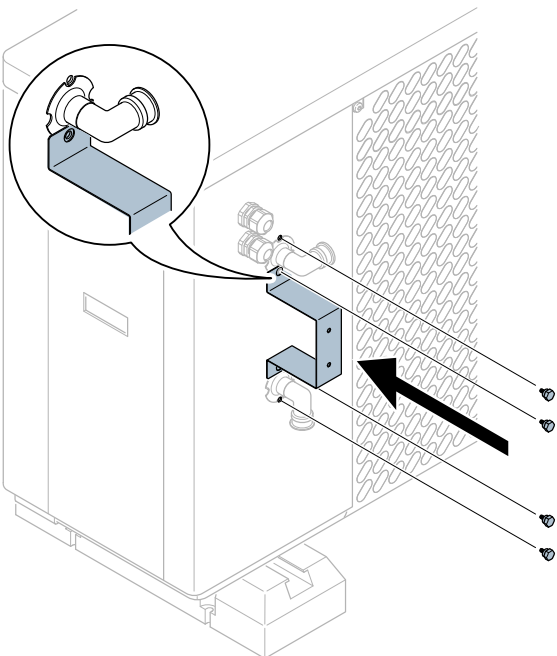


5. Install the gas separator (HN1) on the upper 90-degree coupling and the check valve (RM1) on the lower 90-degree coupling.

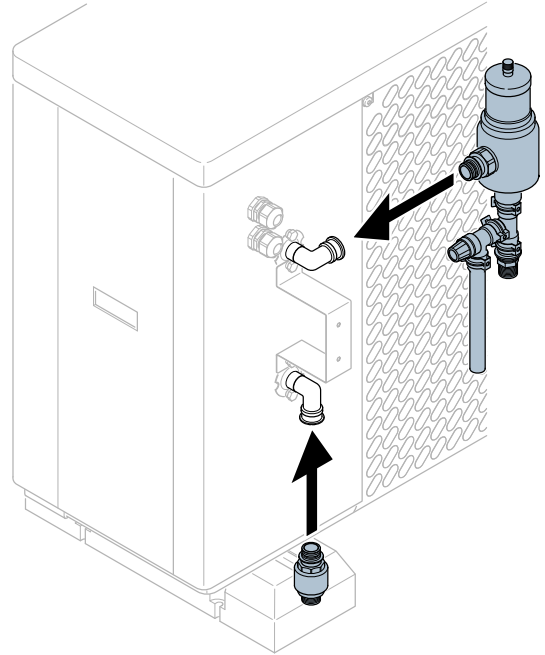


6. Mount the supplied click-fittings at the pipe transitions.

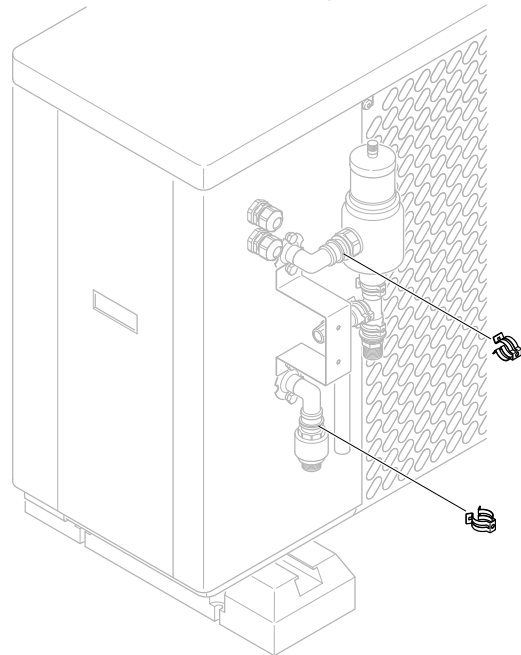


7. Attach condensation insulation along the pipes, from the back of the heat pump to the gas separator and over the check valve.

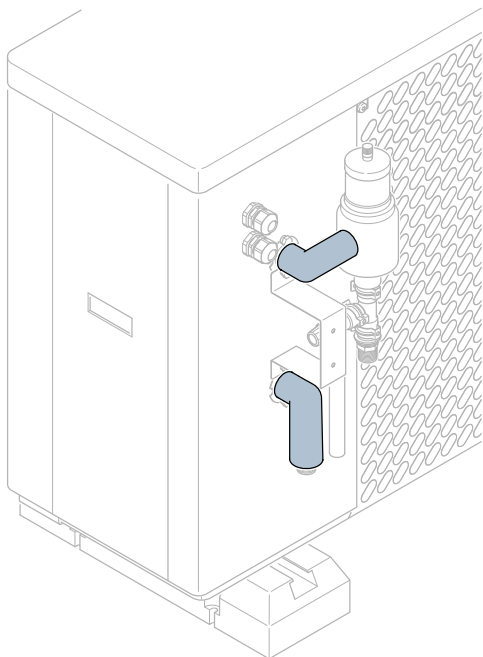

- b) Connect the heating medium return line to the check valve connection (XL13).

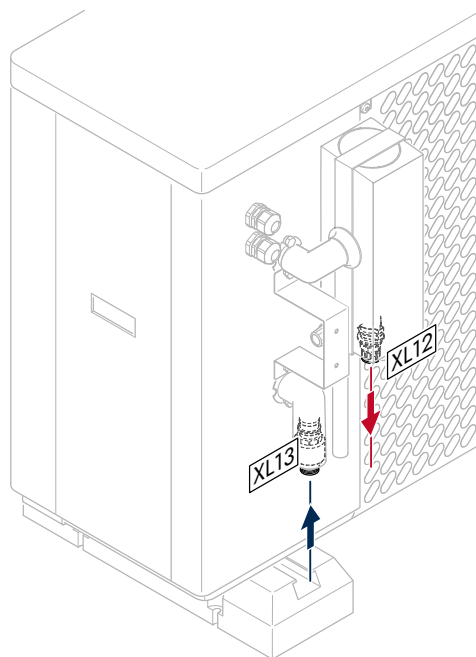


8. Install the rear and front insulation blocks around the gas separator.

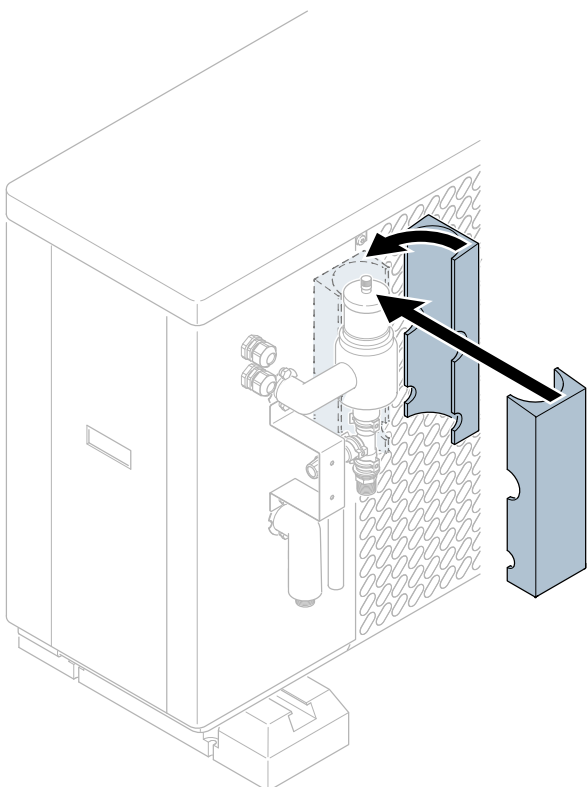


10. Mount the circular insulation lids at the top and bottom of the insulation blocks.

NOTE
Mount the angled insulation lid at the top, and the open-end insulation lid at the bottom.

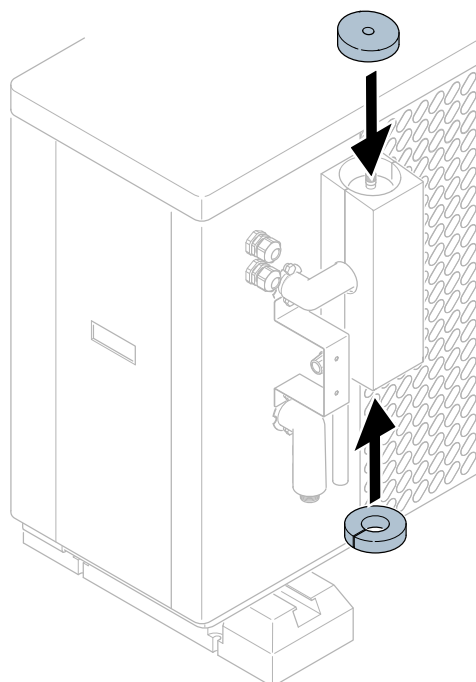


9. Install the pipes for the distribution system to the unit.
a) Connect the heating medium supply line to the gas separator outlet (XL12).


11. Install self-adhesive condensation insulation around gaps and pipe penetrations.

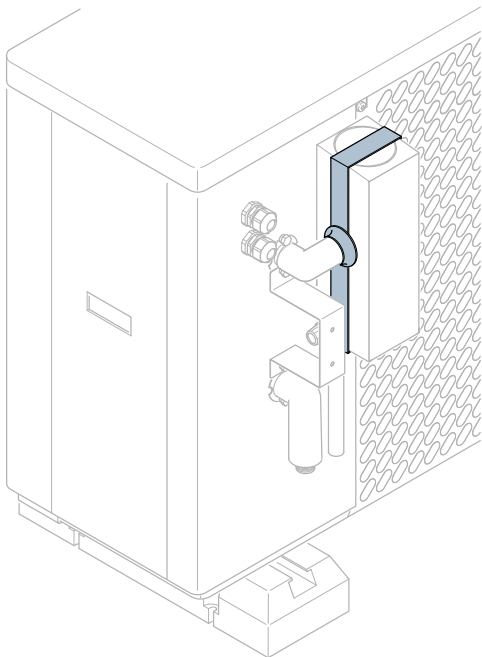

13. Attach the cover for the safety valve (FL2) to the gas separator casing.

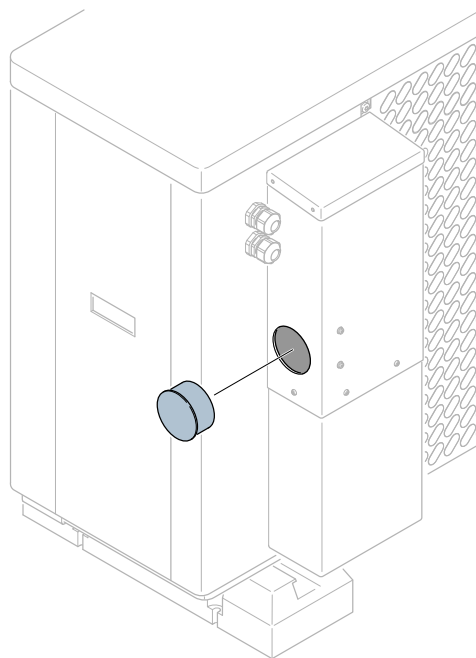

12. Install the gas separator casing on the bracket by using the supplied screws and washers.

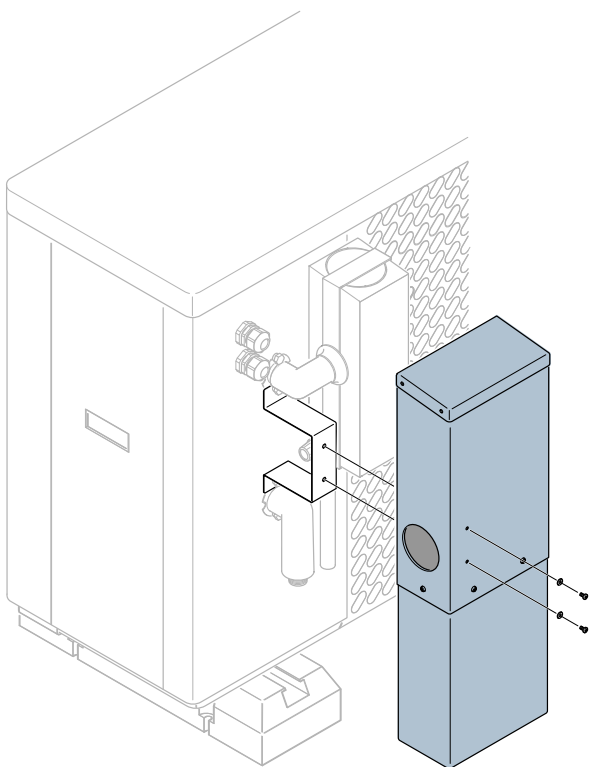

5 ELECTRICAL INSTALLATION

Electrical installation, general

⚠ WARNING

All electrical connections must be performed by a qualified electrician and in accordance with applicable regulations.

! CAUTION

Do not start the unit until it has been filled with water and all electrical connections have been checked. Premature start-up can cause damage to internal components.


- The unit must be disconnected before the house wiring is insulation tested.
- Power cables should be placed at least 200 mm from communication and sensor cables.
- The product must be installed with a separate residual current device (RCD) with a tripping current of 30 mA.

Cable channels

The heat pump has cable glands on the back of the unit.

ID CONNECTION TYPE

UB1	Power supply
UB2	Communication and external connections

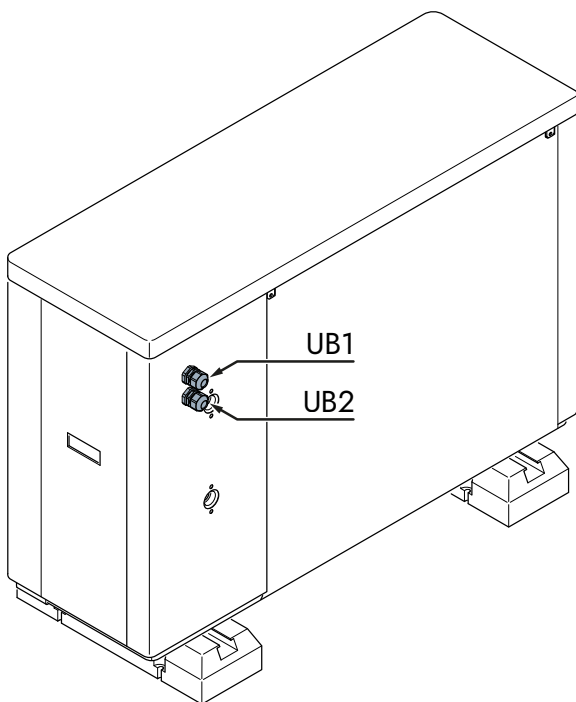


Access


This section describes how to access the electrical connections in the heat pump.

1. Hold the electrical cover in place.

2. Release the screws at the bottom of the electrical cover.

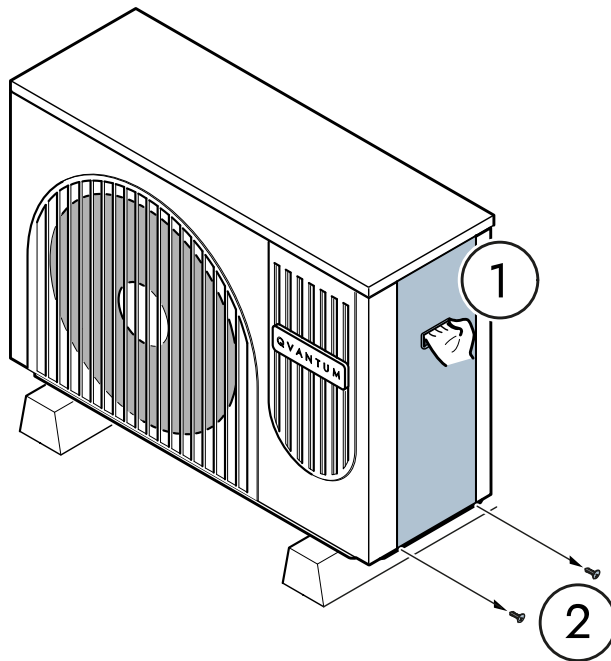

3. Slide the electrical cover downwards.
4. Remove the electrical cover from the heat pump.

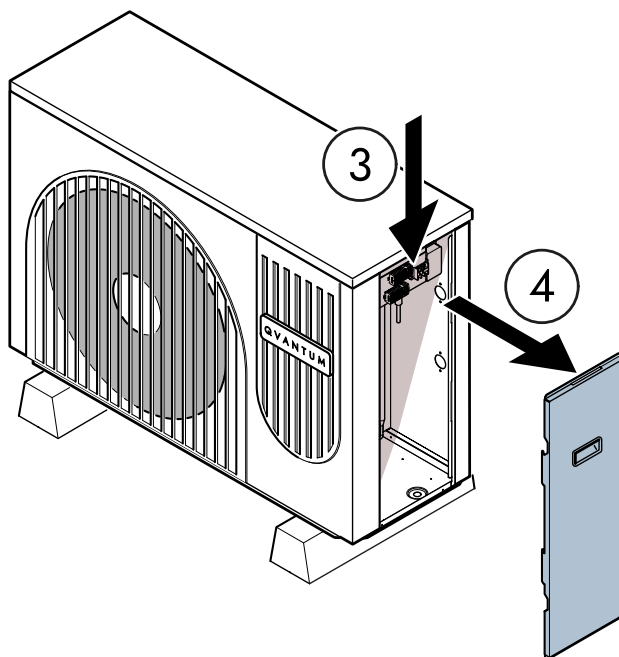

Electrical connections

Power connection

An isolator switch with a 3 mm minimum breaking distance must be used to install the unit. Size the minimum cable area in accordance with the fuse rating that is being used. Dimension the fuse size according to the following table.

MODEL	FUSE SIZE
QA-9	13 A (class C)
QA-15, 1x230 V	25 A (class C)

MODEL	FUSE SIZE
-------	-----------

QA-15, 3x400 V	13 A (class C)
----------------	----------------

The power supply is connected to screw terminal block XD1.


 **NOTE**

Secure the supply cable with the cable retention (UB20) on the junction box (XD3).


1x230 V

 **NOTE**

If installed with a Quantum QH 3x400 V, it is recommended that the QA is connected to L3 in the main distribution board of the property.

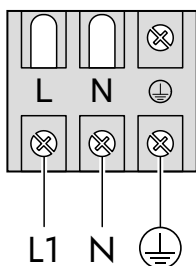


3x400 V

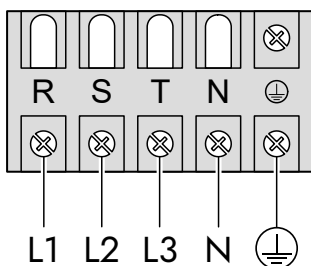


Hydronic unit

Connect the hydronic unit communication to spring load terminal blocks on XD2.

Connect the cables by inserting a screwdriver or similar at the top of the terminal block (1). When the spring in the terminal block is open, insert the cable (2).

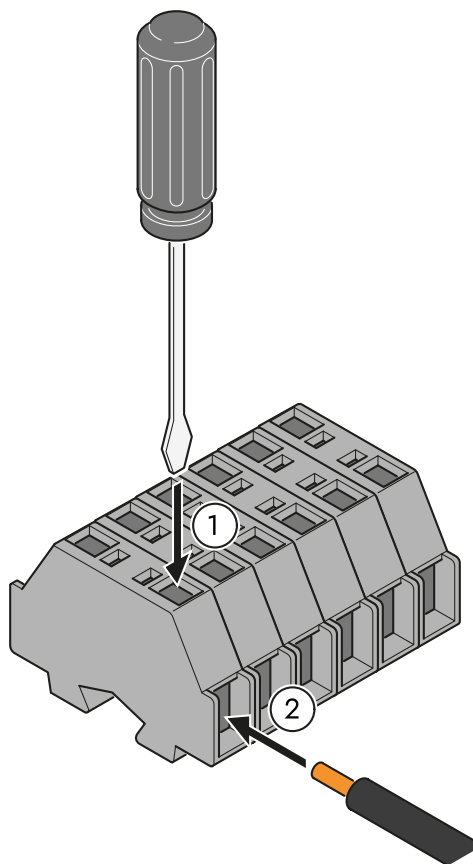

Connect the communication wiring from the hydronic unit to XD2:13-14 and a grounding point.

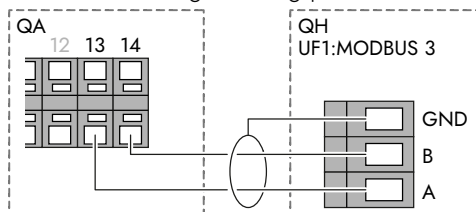

6 COMMISSIONING

Before first start-up

CAUTION

Before the first start-up, ensure that there is no frozen water in the system.

NOTE

Before the first start-up, ensure that there is water in the distribution system.

- Ensure that all pipe connections are correct and tightened.
- Ensure that the gas separator and the gas separator housing are mounted correctly.
- Ensure that the power supply to the heat pump is installed correctly.
- Ensure that the communication cable to the hydronic unit is installed correctly.
- Reassemble all covers.

First start-up

1. Turn on the isolator switch.
2. Verify that the heat pump is powered on.
3. Wait approx. 15 minutes before powering on the hydronic unit.

TIP

The compressor starts approximately one minute after a demand is detected by the controller.

4. If necessary, adjust affected settings through the display in the hydronic unit.

7 SERVICE

General

CAUTION

Maintenance and servicing must be performed by persons with sufficient knowledge about the task.

Maintenance

NOTE

The end user must be informed about necessary maintenance actions.

Regular checks

In order to prevent possible operational disturbances, regular checks of the heat pump must be carried out.

- Ensure that the unit is clean and free of debris.

NOTE

Clean the unit using hot water and a soft cloth. Do not use chemicals to clean the unit.

- Check that condensation water drain is not obstructed.
- Check the machine for uncontrolled ice formation.

8 TROUBLESHOOTING

Before troubleshooting

If the system does not inform about an active fault, check the following components before troubleshooting:

WARNING

The incoming supply electricity must be isolated at the safety switch by or under the supervision of a trained electrician in the event that corrective action is needed to address faults that call for work inside screwed hatches.

- Power supply.
- Group and main fuses of the property.
- Residual current device (RCD).
- Internal fuses in the hydronic unit.
- Safety temperature limiter (FQ10) in the hydronic unit.
- That the air flow to the heat pump is not obstructed.

The heat pump does not start

An alarm is active

- Check the display unit of the hydronic unit for information about possible alarms.

No demand is active

- Heating or hot water production is not requested by the hydronic unit.

The compressor is blocked due to temperature limitations

- Ensure that the heat pump is not outside its operational range.

Not enough time has passed since the previous compressor start

- Wait for approximately 30 minutes and see if the compressor starts.

No communication with hydronic unit

Incorrect power supply

- Verify the condition of the power supply for the heat pump unit.

Incorrect connection of communication

- Ensure that the communication cable is correctly installed.

Damaged communication cable

- Replace the communication cable.

Incorrect set-up in hydronic unit

- Ensure that the heat pump is correctly set up in the hydronic unit.

Insufficient hot water production

Increased hot water production

- Wait until the target temperature for the hot water has been reached.

Incorrect hot water settings

- Check and, if necessary, change the hot water settings in the hydronic unit.

Obstructed filterball valve

- Turn off the power supply to the heat pump and clean the filterball valve that is connected to the heat pump inlet connection.

Low room temperature

Insufficient flow in distribution system

- Fully open several or all thermostats.

Incorrect room temperature settings

- Check, and if necessary, change the room temperature settings in the hydronic unit.

Air in distribution system

- Purge the distribution system.

Low compressor frequency

- Check the compressor frequency and make sure that the compressor parameters are adjusted properly.
 - a) If adjusting the compressor settings is not possible or insufficient, contact a service technician.

Fan is not running or is running too slowly

- Adjust the fan speed parameters.
 - a) If adjusting the fan speed settings is not possible or insufficient, contact a service technician.

Refrigerant leakage

- Check the exhaust temperature and the refrigerant pressure.
 - a) If a leakage is present, contact a service technician.

Obstructed filterball valve

- Turn off the power supply to the heat pump and clean the filterball valve that is connected to the heat pump inlet connection.

High room temperature

Incorrect room temperature settings

- Check, and if necessary, change the room temperature settings in the hydronic unit.

Frost build-up on evaporator

Insufficient air flow over the evaporator

- Check that the fan operates as intended.

Refrigerant amount issue

- Check the refrigerant pressure.
 - a) If a leakage is present, contact a service technician.

Too low compressor frequency

- Check the compressor frequency.
 - a) If adjusting the compressor settings is not possible or insufficient, contact a service technician.

Abnormal noise

Unfastened screws

- Ensure that all screws are properly fastened.

Fan blade or fan motor

- Ensure that the fan is functioning correctly and is firmly mounted.

Compressor


- Ensure that the compressor is functioning correctly and is firmly mounted.

Adjoining components

- Ensure that sound is not carried by components touching each other.

9 TECHNICAL SPECIFICATIONS

Sound levels

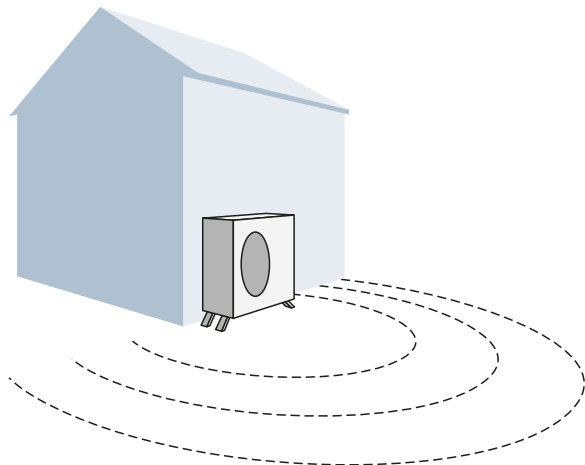

	QA9	QA15-1	QA15-3
--	-----	--------	--------

Sound power level, $L_w(A)_{EN12102}$


Sound pressure levels¹

	QA9	QA15-1	QA15-3
At 1 m	52	52	48.4
At 2 m	46	46	42.4
At 3 m	42	42	38.9
At 4 m	40	40	36.4
At 5 m	38	38	34.4
At 6 m	36	36	32.9
At 7 m	35	35	31.5
At 8 m	34	34	30.4
At 9 m	33	33	29.3
At 10 m	32	32	28.4


¹ Sound pressure levels are calculated using directivity factor Q=4.

Dimensions

QA-9

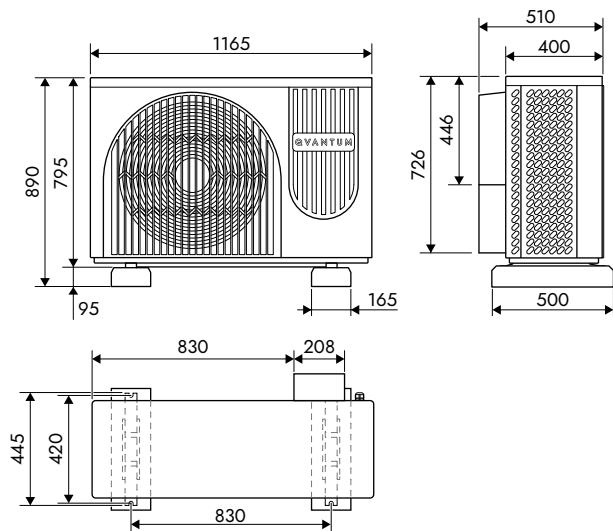

QA-15

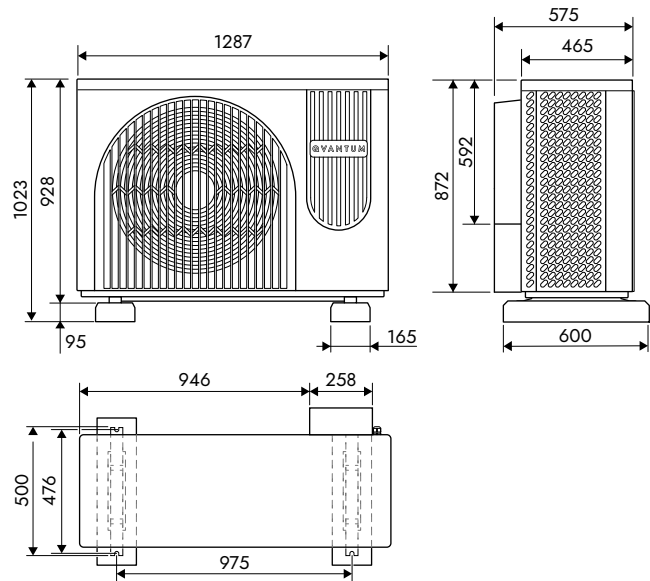


Operational data


Heating capacity

Heating capacity at supply line temperature 35 °C.

QA-9

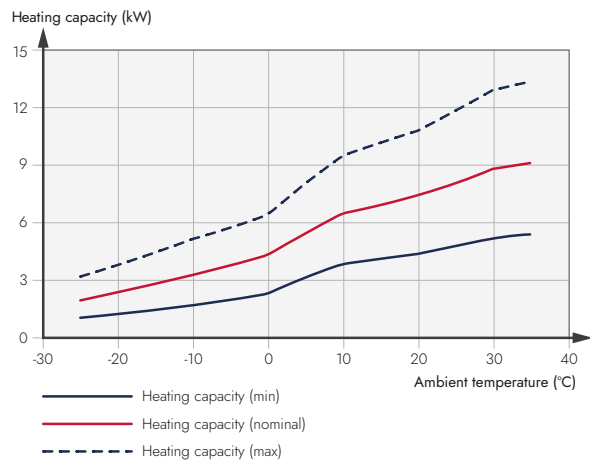


QA-15

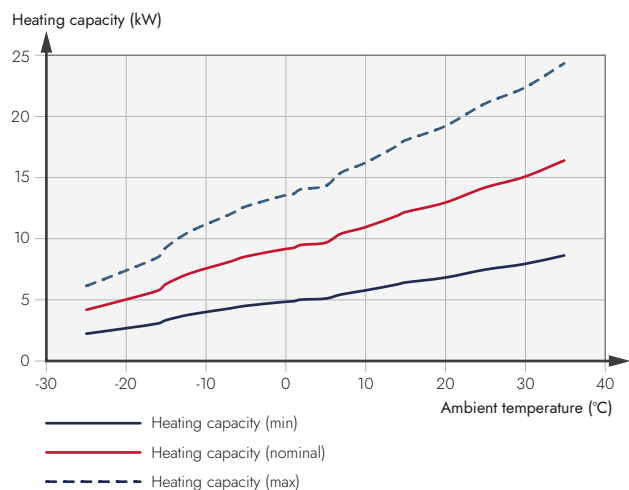


Pressure drop

QA-9

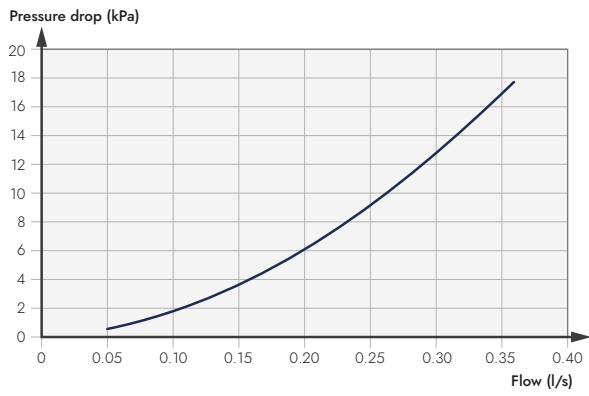


Operational range

Operational range during heating.

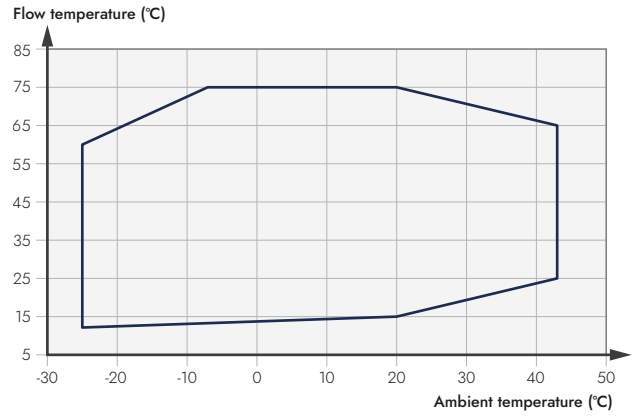

QA-15

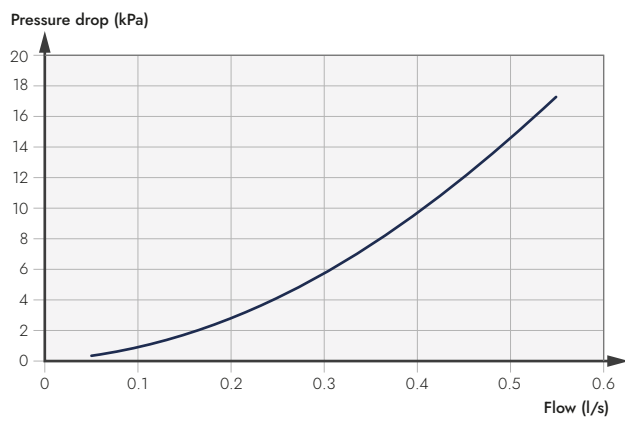

Technical data

MODEL		QA9	QA15-1	QA15-3
Energy efficiency, average climate				
The product's efficiency class room heating, average climate 35 / 55 °C		A+++ / A++	A+++ / A++	A+++ / A++
The system's efficiency class room heating, average climate 35 / 55 °C		A+++ / A++	A+++ / A+++	A+++ / A++
Output data (EN14825)				
Nominal heating output ($P_{designh}$), average climate 35 / 55 °C	kW	4.92 / 4.71	9.46 / 9.02	9.29 / 9.24
SCOP average climate, 35 °C / 55 °C		5.05 / 3.61	4.94 / 3.72	4.92 / 3.67
Heating capacity and COP (EN14511)				
Heating capacity (A7/W35)	kW	6.38	9.99	8.38
Heating capacity (A7/W55)	kW	5.58	9.52	9.6
COP (A7/W35)		4.94	4.71	3.96
COP (A7/W55)		3.04	3.0	3.04
Refrigerant circuit				
Type of refrigerant (GWP)			R290 (3)	
CO ₂ equivalent	kg	1.5	2.55	2.55
Refrigerant quantity	kg	0.5	0.85	0.85
Cut-out value pressostat LP	MPa/bar		0.8 / 8	
Cut-out value pressostat HP	MPa/bar		3.0 / 30	
Heating medium circuit				
Max pressure drop	kPa	40	20	20
Minimum flow	l/s	0.13	0.21	0.21
Nominal flow	l/s	0.28	0.47	0.47
Min. required flow during defrosting	l/s	0.2	0.33	0.33
Electrical data				
Rated voltage	V	230V 1N ~ 50Hz	230V 1N ~ 50Hz	400V 3N ~ 50Hz
Maximum power input	kW	3.0	5.3	5.3
Maximum current input	A	13.5	24.5	10.5
Recommended fuse	A	16	25	13
Enclosure class			IPX4	
Sound data				
Sound power level ($L_{W(A)}$) _{EN12102}	dB	57	57	53.4
Fan data				
Fan motor type			DC motor	
Fan motor power input (min~max)	W	55~105	60~120	60~120
Fan speed	rpm	300~600	220~600	220~600
Connection dimensions				
Heating medium, external thread Ø		DN20	DN20	DN20
Recommended pipe dimension Ø	mm	22	28	28
Weight and dimensions				
Net weight	kg	110	150	150
Heat pump dimensions (W x D x H)	mm	1165 x 400 x 795	1287 x 465 x 928	1287 x 465 x 928
Misc				
Ambient temperature range, min-max	°C		-25~43	
Part no.		1003595	1003597	1003609

Energy labelling

Information sheet

SUPPLIER		QVANTUM	QVANTUM	QVANTUM
MODEL		QA9	QA15-1	QA15-3
Temperature application	°C	35 / 55	35 / 55	35 / 55
Seasonal space heating energy efficiency class, average climate		A+++ / A++	A+++ / A++	A+++ / A++
Rated heat output ($P_{designh}$), average climate	kW	4.9 / 4.7	9.5 / 9.0	9.3 / 9.2
Annual energy consumption space heating, average climate	kWh	2013 / 2701	3956 / 5014	3899 / 5200
Seasonal space heating energy efficiency, average climate	%	199 / 141	195 / 146	194 / 144
Sound power level L_{WA} indoors	dB	-	-	-
Sound power level L_{WA} outdoors	dB	57 / 60	56 / 57	53 / 58

Data for energy efficiency of the package

MODEL		QA9	QA15-1	QA15-3
CONTROLLER		QH-175	QH-175	QH-175
Temperature application	°C	35 / 55	35 / 55	35 / 55
Controller, class		VI	VI	VI
Controller, contribution to efficiency	%	4	4	4
Seasonal space heating energy efficiency of the package, average climate	%	203 / 145	199 / 150	198 / 148
Seasonal space heating energy efficiency class of the package, average climate		A+++ / A++	A+++ / A+++	A+++ / A++

Technical documentation

QA9

MODEL		QA-9					
Type of heat pump		<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water					
Low-temperature heat pump		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No					
Integrated immersion heater for additional heat		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No					
Heat pump combination heater		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No					
Climate		<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm					
Temperature application		<input checked="" type="checkbox"/> Medium (55°C) <input type="checkbox"/> Low (35°C)					
Applied standard		EN14825, EN14511, EN12102					
Rated heat output	Prated	4.71	kW	Seasonal space heating energy efficiency	η_s	141.2	%
Declared capacity for space heating at part load and at outdoor temperature T_j				Declared coefficient of performance for space heating at part load and at outdoor temperature T_j			
$T_j = -7\text{ °C}$	Pdh	4.22	kW	$T_j = -7\text{ °C}$	COPd	2.40	-
$T_j = +2\text{ °C}$	Pdh	2.45	kW	$T_j = +2\text{ °C}$	COPd	3.49	-
$T_j = +7\text{ °C}$	Pdh	2.38	kW	$T_j = +7\text{ °C}$	COPd	4.58	-
$T_j = +12\text{ °C}$	Pdh	2.89	kW	$T_j = +12\text{ °C}$	COPd	5.96	-
$T_j = \text{biv}$	Pdh	4.22	kW	$T_j = \text{biv}$	COPd	2.40	-
$T_j = \text{TOL}$	Pdh	4.73	kW	$T_j = \text{TOL}$	COPd	2.05	-
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	Pdh		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COPd		-
Bivalent temperature	T_{biv}	-7	°C	Min. outdoor air temperature	TOL	-10	°C
Cycling interval capacity	P_{cyc}		kW	Cycling interval efficiency	COP_{cyc}		-
Degradation coefficient	C_{dh}	0.98	-	Max supply temperature	WTOL	75	°C
Power consumption in modes other than active mode				Additional heat			
Off mode	P_{OFF}	0.008	kW	Rated heat output	P_{sup}	0.0	kW
Thermostat-off mode	P_{TO}	0.012	kW				
Standby mode	P_{SB}	0.008	kW	Type of energy input	Electric		
Crankcase heater mode	P_{CK}	0.008	kW				
Other items							
Capacity control	Variable			Rated airflow (air-water)		2400	m ³ /h
Sound power level, indoors/outdoors	L_{WA}	- / 60	dB	Nominal heating medium flow			m ³ /h
Annual energy consumption	Q_{HE}	2701	kWh	Brine flow brine-water or water-water heat pumps			m ³ /h
Contact information	Qvantum Energi AB - Ji-te gatan 7 - 265 38 Åstorp - Sweden						

QA15-1

MODEL		QA-15					
Type of heat pump	<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water						
Low-temperature heat pump	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Integrated immersion heater for additional heat	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Heat pump combination heater	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Climate	<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm						
Temperature application	<input checked="" type="checkbox"/> Medium (55°C) <input type="checkbox"/> Low (35°C)						
Applied standard	EN14825, EN14511, EN12102						
Rated heat output	Prated	9.02	kW	Seasonal space heating energy efficiency	η_s	145.7	%
Declared capacity for space heating at part load and at outdoor temperature T_j				Declared coefficient of performance for space heating at part load and at outdoor temperature T_j			
$T_j = -7\text{ °C}$	P _{dh}	8.08	kW	$T_j = -7\text{ °C}$	COP _d	2.24	-
$T_j = +2\text{ °C}$	P _{dh}	4.89	kW	$T_j = +2\text{ °C}$	COP _d	3.63	-
$T_j = +7\text{ °C}$	P _{dh}	4.53	kW	$T_j = +7\text{ °C}$	COP _d	4.90	-
$T_j = +12\text{ °C}$	P _{dh}	5.25	kW	$T_j = +12\text{ °C}$	COP _d	6.46	-
$T_j = \text{biv}$	P _{dh}	8.08	kW	$T_j = \text{biv}$	COP _d	2.24	-
$T_j = \text{TOL}$	P _{dh}	9.15	kW	$T_j = \text{TOL}$	COP _d	2.04	-
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	P _{dh}		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COP _d		-
Bivalent temperature	T _{biv}	-7	°C	Min. outdoor air temperature	TOL	-10	°C
Cycling interval capacity	P _{cyh}		kW	Cycling interval efficiency	COP _{cy}		-
Degradation coefficient	C _{dh}	0.98	-	Max supply temperature	WTOL	75	°C
Power consumption in modes other than active mode				Additional heat			
Off mode	P _{OFF}	0.008	kW	Rated heat output	P _{sup}	0.0	kW
Thermostat-off mode	P _{TO}	0.016	kW				
Standby mode	P _{SB}	0.008	kW	Type of energy input	Electric		
Crankcase heater mode	P _{CK}	0.008	kW				
Other items							
Capacity control	Variable		Rated airflow (air-water)			4000	m ³ /h
Sound power level, indoors/outdoors	L _{WA}	- / 57	dB	Nominal heating medium flow			m ³ /h
Annual energy consumption	Q _{HE}	5014	kWh	Brine flow brine-water or water-water heat pumps			m ³ /h
Contact information	Quantum Energi AB - Ji-te gatan 7 - 265 38 Åstorp - Sweden						

QA15-3

MODEL		QA-15					
Type of heat pump	<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water						
Low-temperature heat pump	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Integrated immersion heater for additional heat	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Heat pump combination heater	<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No						
Climate	<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm						
Temperature application	<input checked="" type="checkbox"/> Medium (55°C) <input type="checkbox"/> Low (35°C)						
Applied standard	EN14825, EN14511, EN12102						
Rated heat output	Prated	9.24	kW	Seasonal space heating energy efficiency	η_s	143.8	%
Declared capacity for space heating at part load and at outdoor temperature T_j				Declared coefficient of performance for space heating at part load and at outdoor temperature T_j			
$T_j = -7\text{ °C}$	P _{dh}	8.0	kW	$T_j = -7\text{ °C}$	COP _d	2.21	-
$T_j = +2\text{ °C}$	P _{dh}	4.9	kW	$T_j = +2\text{ °C}$	COP _d	3.64	-
$T_j = +7\text{ °C}$	P _{dh}	4.47	kW	$T_j = +7\text{ °C}$	COP _d	4.66	-
$T_j = +12\text{ °C}$	P _{dh}	5.2	kW	$T_j = +12\text{ °C}$	COP _d	6.38	-
$T_j = \text{biv}$	P _{dh}	8.0	kW	$T_j = \text{biv}$	COP _d	2.21	-
$T_j = \text{TOL}$	P _{dh}	8.7	kW	$T_j = \text{TOL}$	COP _d	1.94	-
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	P _{dh}		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COP _d		-
Bivalent temperature	T _{biv}	-7	°C	Min. outdoor air temperature	TOL	-10	°C
Cycling interval capacity	P _{cyh}		kW	Cycling interval efficiency	COP _{cy}		-
Degradation coefficient	C _{dh}	0.99	-	Max supply temperature	WTOL	75	°C
Power consumption in modes other than active mode				Additional heat			
Off mode	P _{OFF}	0.01	kW	Rated heat output	P _{sup}	0.0	kW
Thermostat-off mode	P _{TO}	0.01	kW				
Standby mode	P _{SB}	0.01	kW	Type of energy input	Electric		
Crankcase heater mode	P _{CK}	0.01	kW				
Other items							
Capacity control	Variable			Rated airflow (air-water)		4000	m ³ /h
Sound power level, indoors/outdoors	L _{WA}	- / 58	dB	Nominal heating medium flow			m ³ /h
Annual energy consumption	Q _{HE}	5200	kWh	Brine flow brine-water or water-water heat pumps			m ³ /h
Contact information	Quantum Energi AB - Ji-te gatan 7 - 265 38 Åstorp - Sweden						

Index

B

Before installing
Transport [5](#)

C

Commissioning [15](#)

E

Electrical connections [13](#)
Power connection [13](#)
Electrical installation [13](#)
Hydronic unit [14](#)
Environmental information [4](#)

I

Important information
Environmental information [4](#)
Product labels [4](#)
Safety [3](#)

P

Pipe connections [8](#)
Pipe installation
Installation [9](#)
Preparations [8](#)

S

Supplied components [5](#)

T

Technical specifications
Dimensions [19](#)
Energy labelling [22](#)
Sound levels [19](#)
Technical data [21](#)
Transport [5](#)
Troubleshooting [17](#)
Before troubleshooting [17](#)

QCH EN 2437-1



TD18

This publication presents information that was valid at the time of publishing.
Quantum reserves the right to make changes without prior notification.
Subject to possible printing errors.
©2024 Quantum Energi AB

HEAT PUMPS FOR SUSTAINABLE CITIES

WE CHANGE THE WAY THE CITIES OF EUROPE ARE HEATED

Quantum, founded in Sweden in 1993, develops high-quality heat pumps for individual buildings and innovative heat pump-based solutions for densely populated areas to enable everybody to benefit from emission free heating and cooling. The company has deep knowledge in both heat pump technology and energy systems engineering and works in close collaboration with engineering consultants, installers, project developers and utilities.

Quantum Energi AB

Ji-te gatan 7, 265 38 Åstorp – Sweden | quantum.com



Q V A N T U M